

INSTALL GUIDE




SCAN CODE FOR INSTALLATION VIDEO



1. Insert the Swivel Pod 360 Base • Without the seat attached, position the **Swivel Pod 360** Base on the kayak (**Photo A**). Line up the Rubber Locking Post Fangs with the front scupper holes. • Press the Base down so the Fangs insert into the scupper holes. Finesse the Fangs into the scupper holes by rocking them in and adding pressure downward, they are designed to be a very tight fit. • Make sure the Base lies flat on the deck, and keep the original seat riser clear of the back of the Base during this step.


2. Secure the Base • There are two Locking Knobs connected to the Fangs (**Photo A**). • Turn the Locking Knobs counter-clockwise to tighten and lock the Base into place until secure to the kayak. • The rubber will expand inside the scupper holes to hold the base securely. • Pull up on the Base to test. • Tighten until snug. • Don't overtighten.

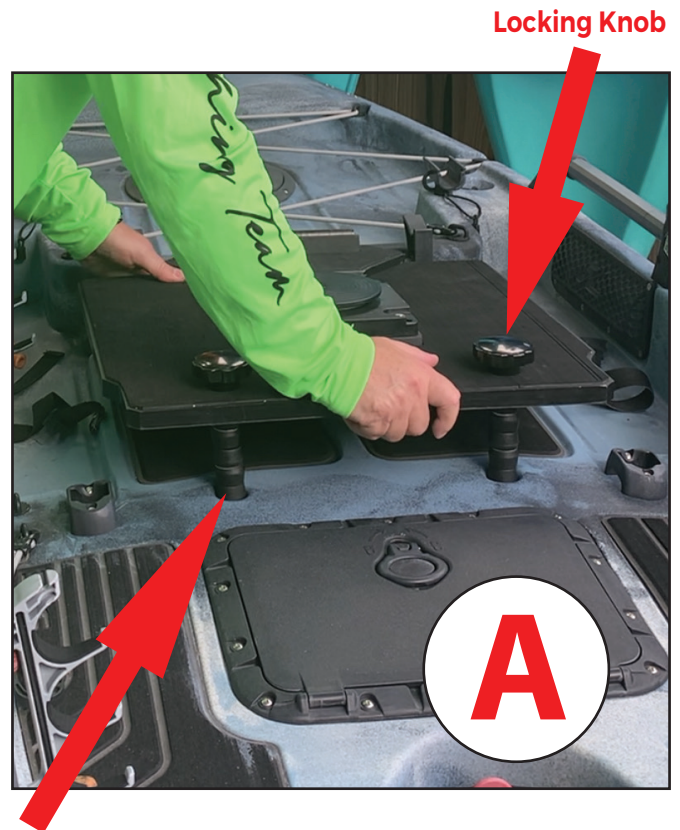


Rubber Locking Post Fang




Seat Riser Bar

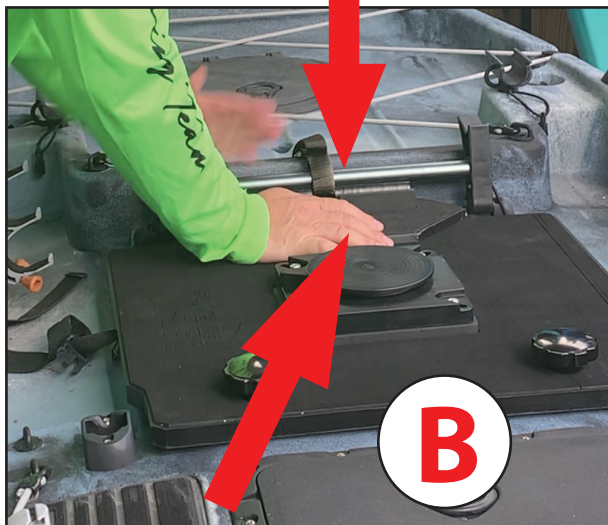

Male Swivel Connector

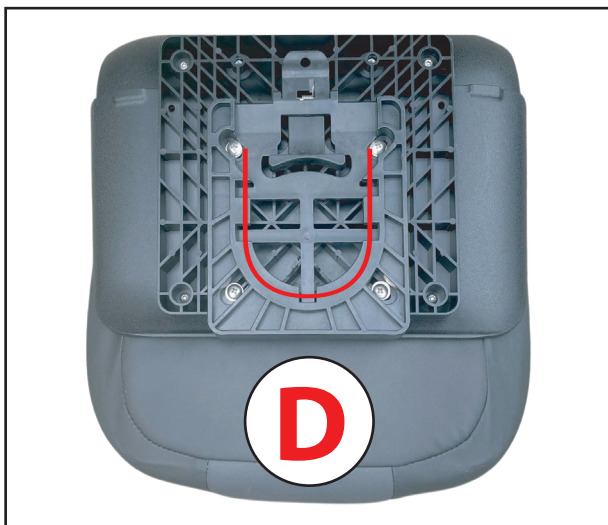

3. Lock the Back of the Base • Push the center of the back of the Base down while also pushing the seat riser bar forward toward the front of the kayak (*Photo B*). • Apply firm downward pressure to the rear of the Base to engage the 2 Cradle Locks (*Photo F*). • You will need more downward pressure on the Base than forward pressure on the seat riser bar, and the bar will snap into place. • To remove the Base, reverse this process.

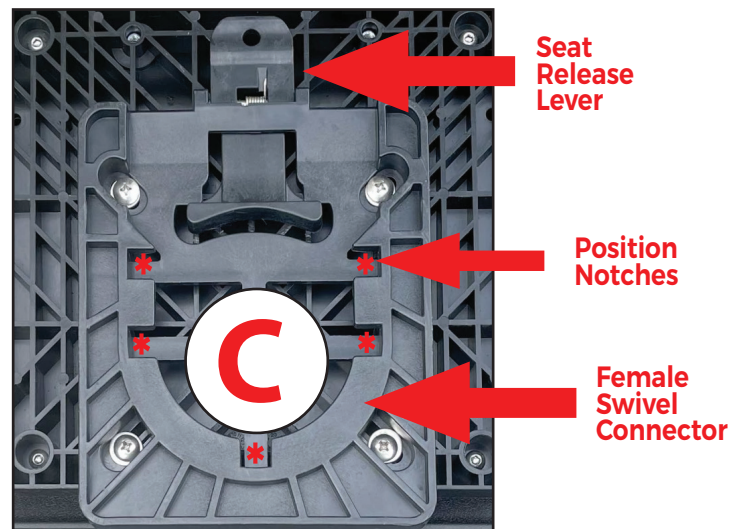

4. Attach the Seat • Photo C shows the Seat Release Lever for the Female Swivel Connector under the seat. To install the seat, press the Seat Release Lever and align the horseshoe shaped opening (*Photo D*) with the Male Swivel Connector (*Photo B*). • Make sure the seat is in the position shown (*Photo E*). • Slide the seat back until you hear a click, confirming it's locked in. • Pull the seat forward to check it's secure. • To remove, press the Seat Release Lever and slide the seat forward.

5. Seat Back Lock Button • There is a Seat Back Lock Button on the lower left back of the seat. • To release the seat back into the up position press the button while lifting up the back of the seat. • When you close the seat it will lock. • **LET'S GO KAYAKING!**

6. Position Notches. There are 5 different Position Notches that the seat will fall into when you lean back while swiveling. These will hold the seat in place - they do not lock the seat in place. To continue to swivel just lean forward to disengage. Reference Photo C for the various positions.

7. Care Instructions • Wipe down seat with a clean damp cloth. • Remove seat and do a fresh water rinse of the Base after each use.

